



JAB2v2

Connection Guide

BY SURE ELECTRONICS CO., LTD.

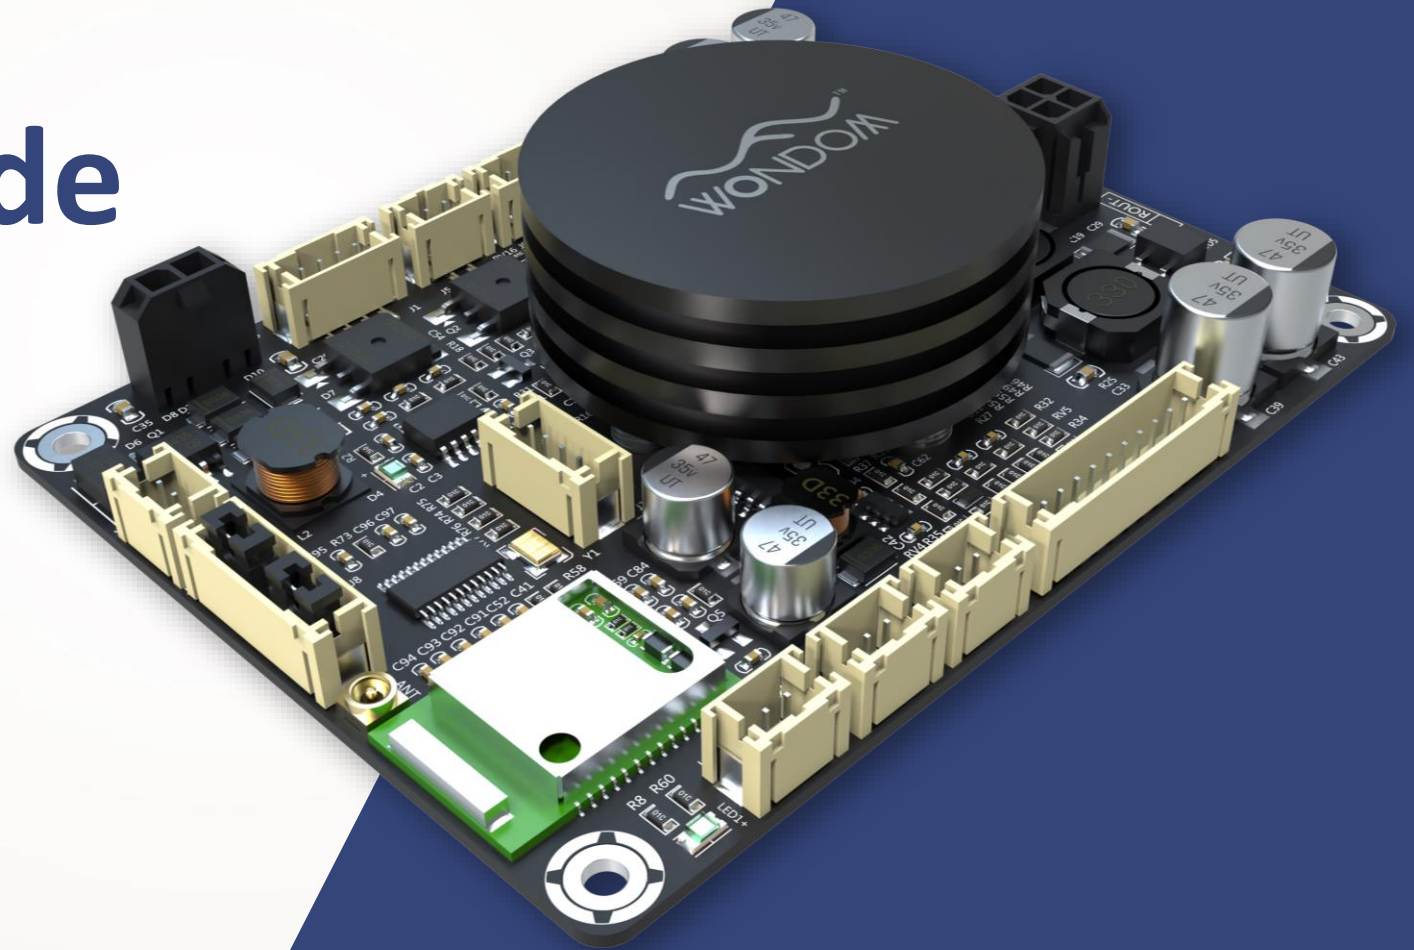

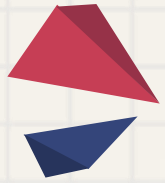

What is JAB2v2?

JAB2v2 is an audio amplifier board integrated with **Bluetooth V5.0 (supporting APT-X HD)**, including four models as 2 x 50W, 2 x 30W, 1 x 100W and 1 x 60W. Besides power supply power, JAB2v2 supports battery power, which greatly improves the portability. Bluetooth, battery power, light weight and high quality audio performance make JAB2v2 perfectly suitable for portable Bluetooth speakers, home audio, garden audio and DIY applications.






What is JAB2v2?

Thanks to the equipped DSP chip, JAB2v2 supports PC UI control after connection with WONDOM ICP5 or higher version(s), through which, you can **adjust volume, gain, frequency and EQ setting**. As for the details, please refer to 'PC UI Control' part.

In addition to speaker output, JAB2v2 offers an extra mixed output. Customers can configure it into a subwoofer output (An amplifier is required) by frequency adjustment in PC UI to build an audio 2.1 system.


Key Features:

- Integrated with Bluetooth 5.0
- Supporting Battery Power
- Bluetooth Pairing Cancellation
- Integrated with DSP
- Supporting PC UI
- Mixed Line Output

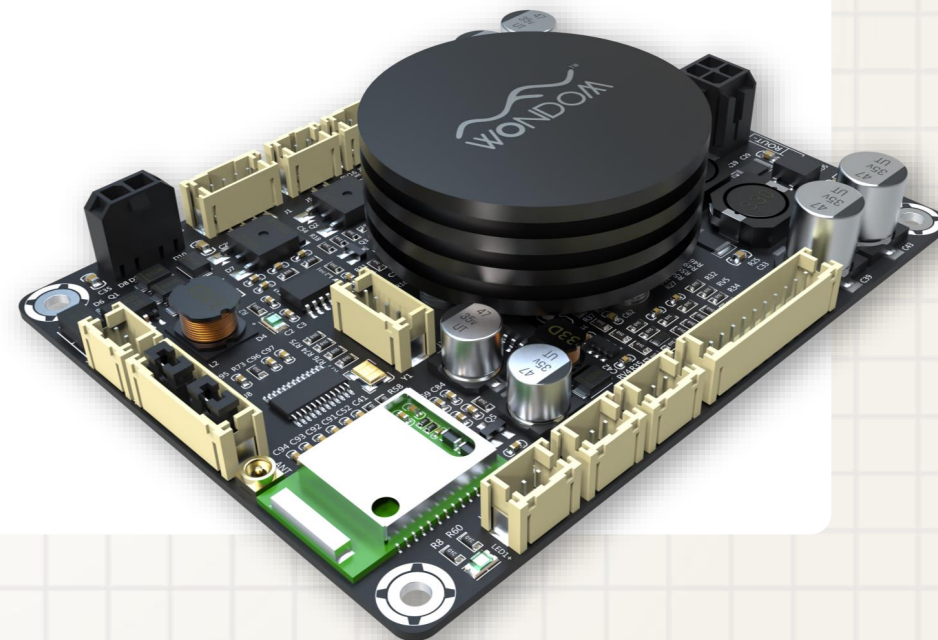



Connection Diagram

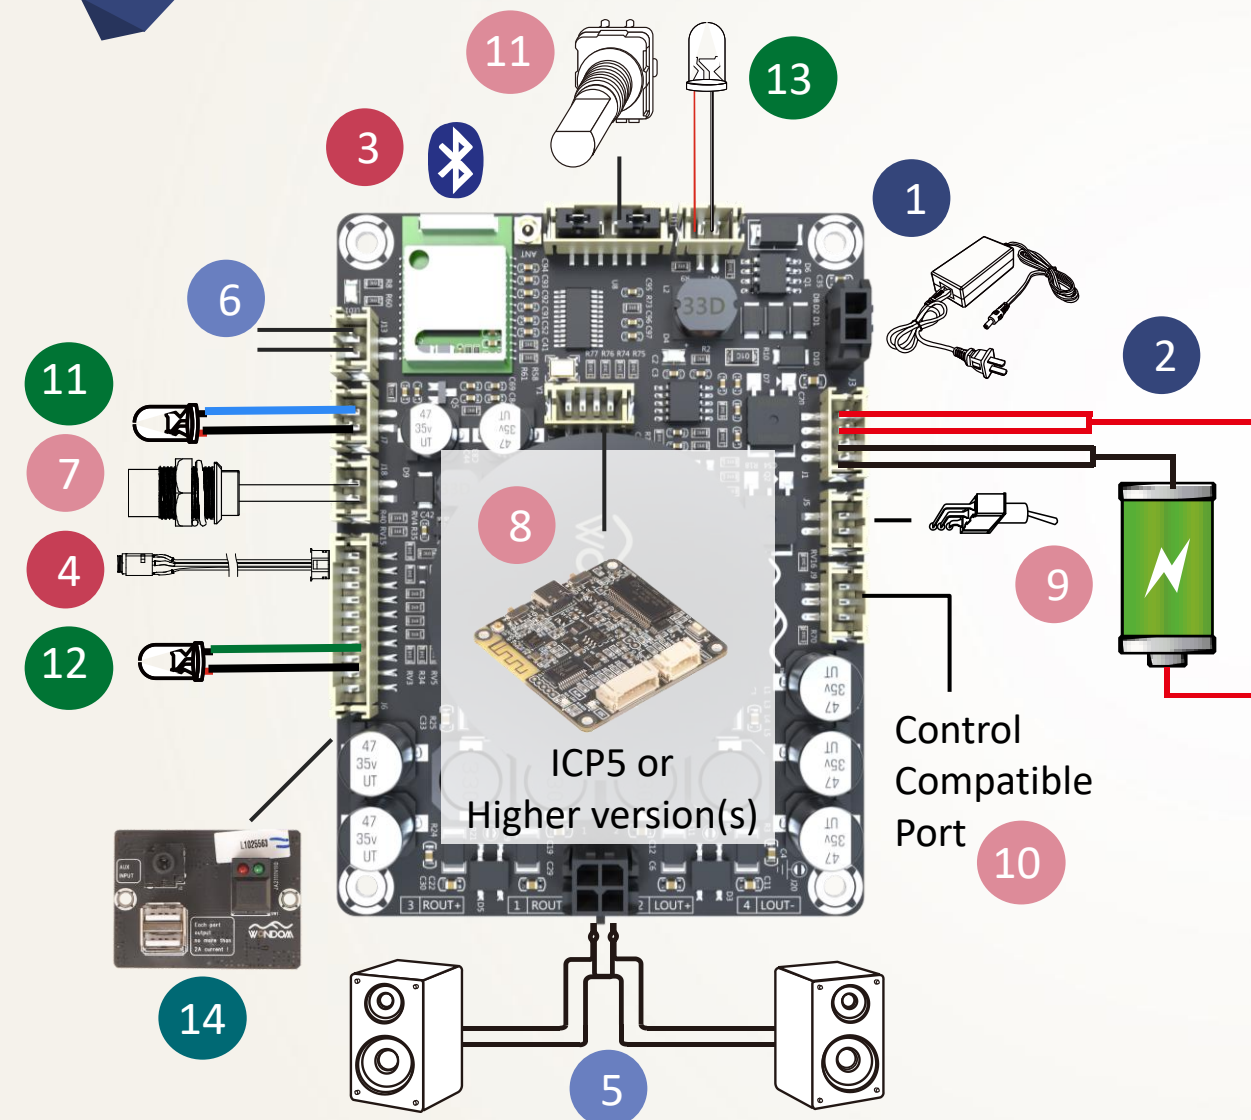

Power Supply

- 1 12-24V power adapter
- 2 Battery boards

Audio Input

- 3 Bluetooth 5.0 aptX HD
- 4 3.5mm AUX IN

Audio Output

- 5 Speaker output
- 6 Mixed Line output, supporting configuration as subwoofer signal

Extension Function

- 14 Extension Board

Control

- 7 BT Pairing Cancellation
- 8 PC UI Control
- 9 Shutdown Control
- 10 Synchronization Port
- 11 Volume Control


LED Indicator

- 11 Bluetooth indicator
- 12 Power indicator
- 13 Charging indicator



Power Supply

Power adapter

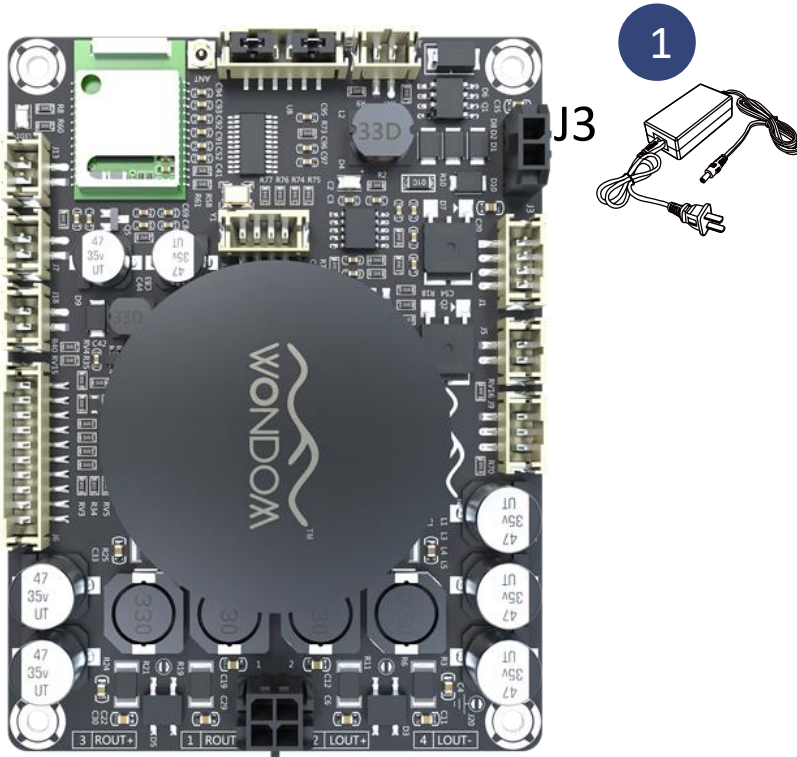


1, Power supply – J3

Suggested power supply should be 19V 2.1A. You can also use any adapter within 12-24V DC output, , 1A minimum.


The terminal interface used for power supply is Molex MicroFit-2Pos-3mm.

A power supply cable comes with JAB2v2 in the package.

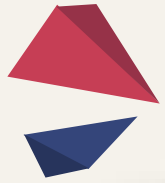

Power Supply

Power adapter & Battery board

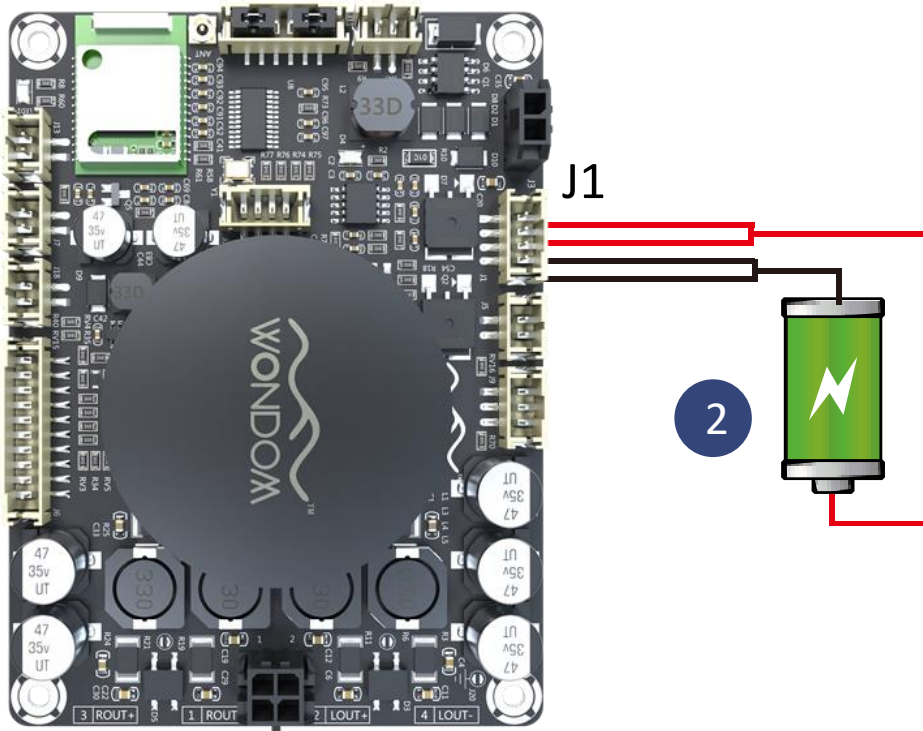


2, Battery board – J1

JAB2v2 supports battery power which improves the portability.


MPPT charging circuit is equipped in JAB2v2. So, you can use AA-JA11113 to power JAB2v2.

When you want to charge batteries with AA-JA11113, connect the power supply and battery board together with JAB2v2. The voltage of the power supply is suggested to be larger than 15V and the current is larger than 1A.

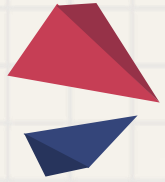



Audio Input

BT & 3.5mm AUX IN

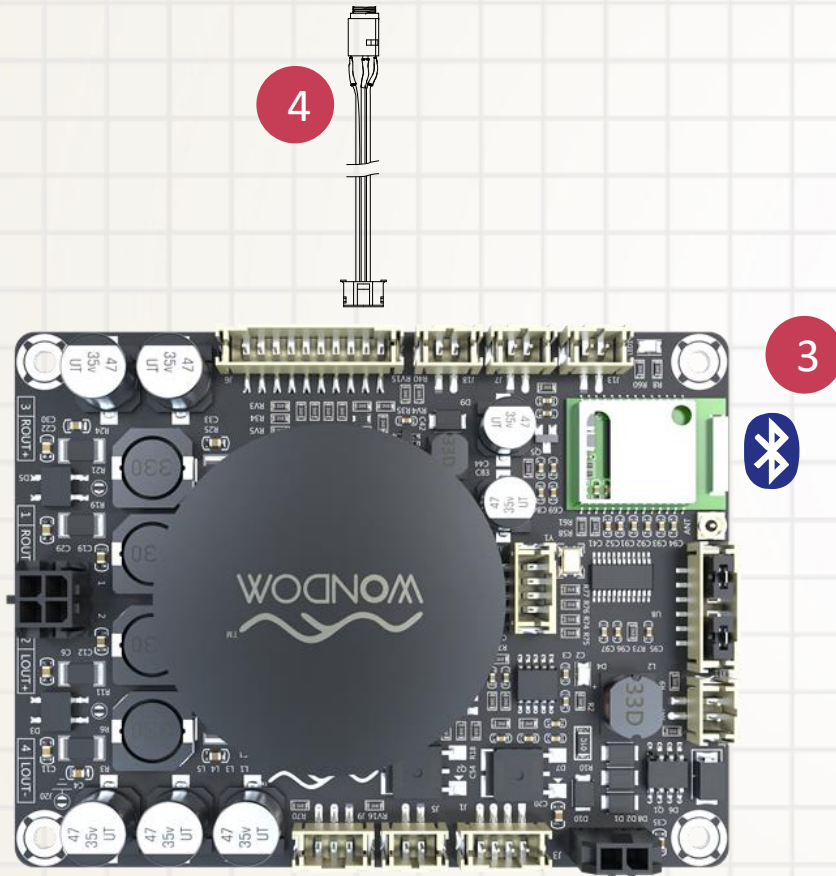

JAB2v2 supports both Bluetooth input and 3.5mm line input. Signals from the two input methods will be mixed before being transmitted to the amplification circuit.

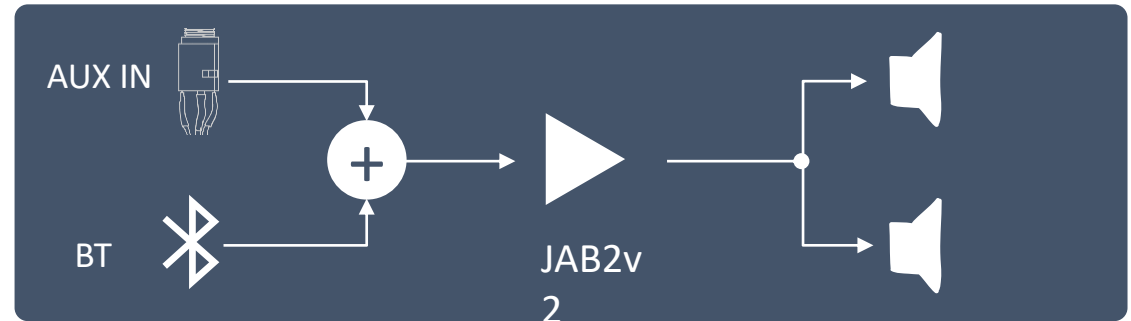


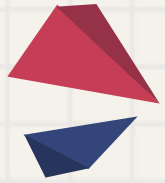

Audio Input

BT & 3.5mm AUX IN

3

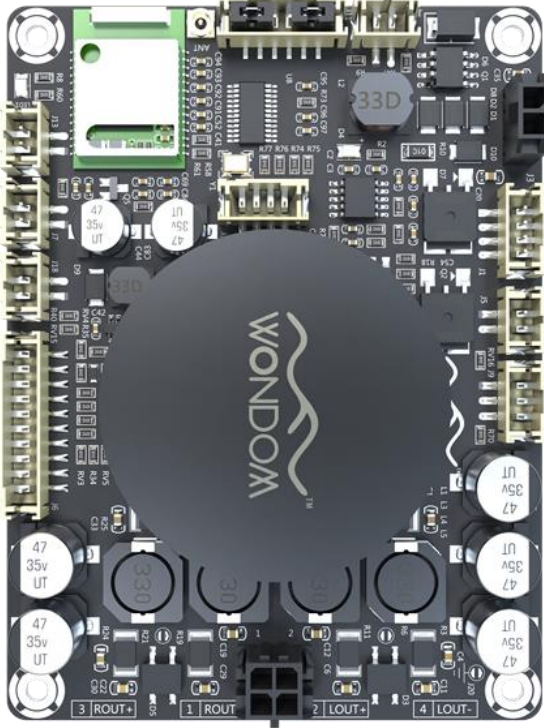

3, Bluetooth input

JAB2v2 is integrated with Bluetooth 5.0 module, supporting aptX HD.

There is a built-in Bluetooth antenna on the board for stable connection. So you can directly use JAB2v2 for audio playback.

< Developer options

Trigger Bluetooth Audio Codec Sel...

AAC

Qualcomm® aptX™ audio

> Qualcomm® aptX™ HD audio


LDAC

Qualcomm® aptX™ Adaptive audio

LHDC

Enable optional codecs


Disable optional codecs

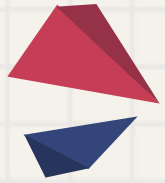

Audio Input

BT & 3.5mm AUX IN

3

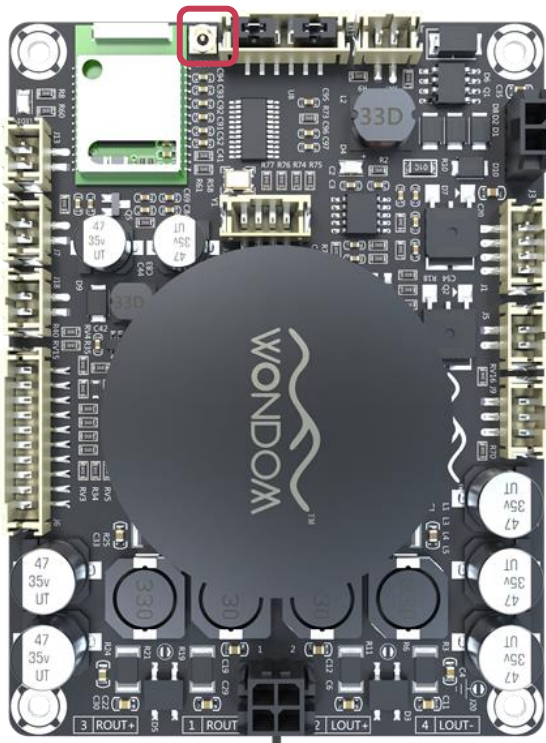


3, Bluetooth input

JAB2v2 is integrated with Bluetooth 5.0 module, supporting aptX HD.


An external antenna port is also provided on board to ensure stable connection even if JAB1 is installed in a cabinet.

You can find the external antenna in Function cables kit (AA-JA11114).

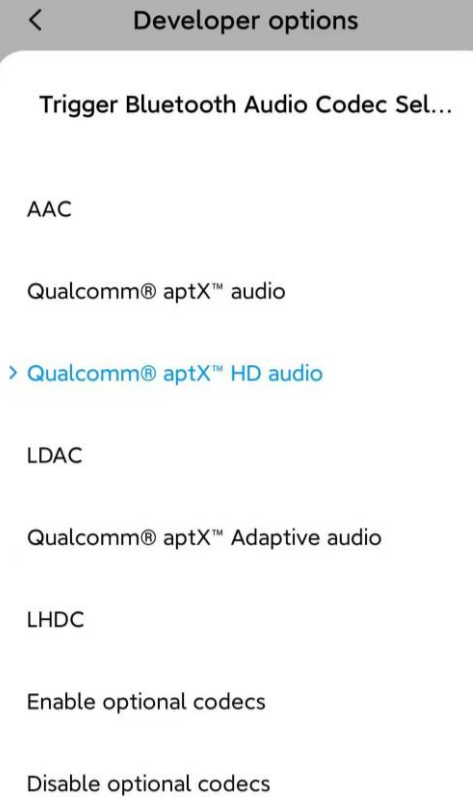

Audio Input


BT & 3.5mm AUX IN

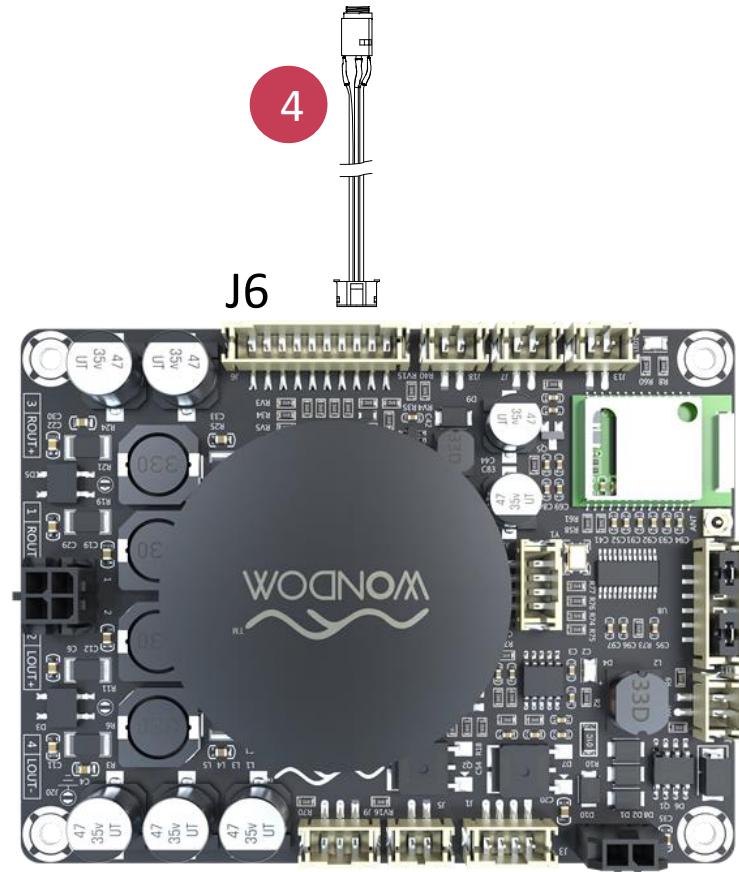


4, 3.5mm AUX IN – J6

Pin 6, 7, 8 of J6 is used for AUX-IN.

You can get the 3.5mm AUX-IN cable in the Functional cables kit. (AA-JA11114 / AA-JA11116)

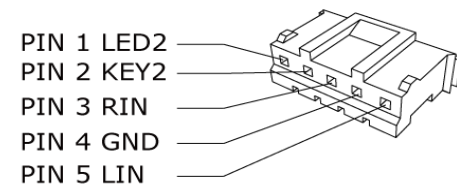


Pin definition of
3.5mm AUX IN cable

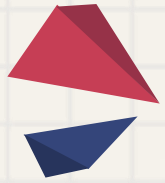

Audio Output

Speaker output & Cascade output

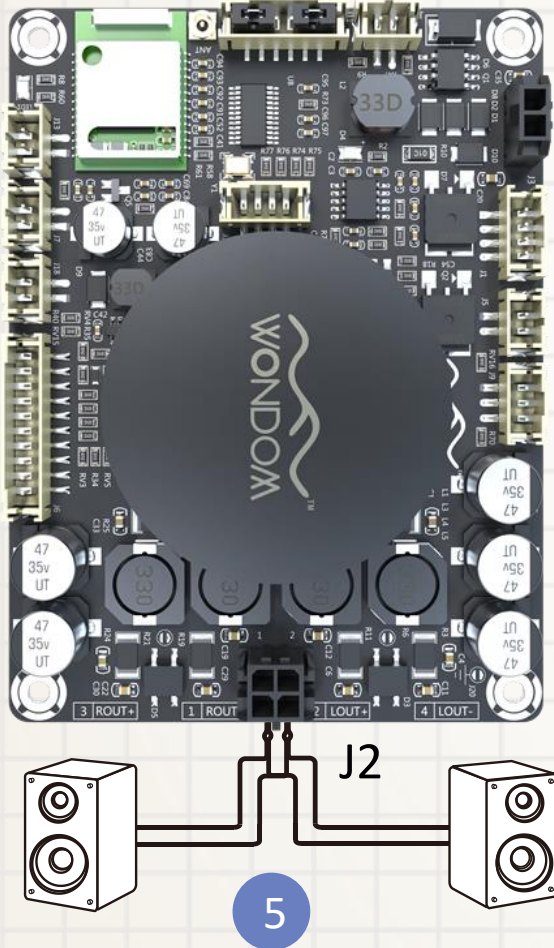


5, Speaker Output – J2

JAB2v2 includes four models, 2 x 50W, 2 x 30W, 1 x 60W and 1 x 100W. 2x30W and 1x60W versions do not have built in heatsink and amplifier chips are different.


Speaker output connector is a Molex-MicroFit-4Pos-2x2 3mm. Take care of the connector polarity definition, if connected incorrectly, you might damage your speaker, cannot get sound output, or get incorrect audio phase.

A speaker cable comes with JAB2v2 in the package for easy connection.

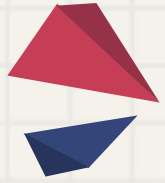

Audio Output

Speaker output & Cascade output

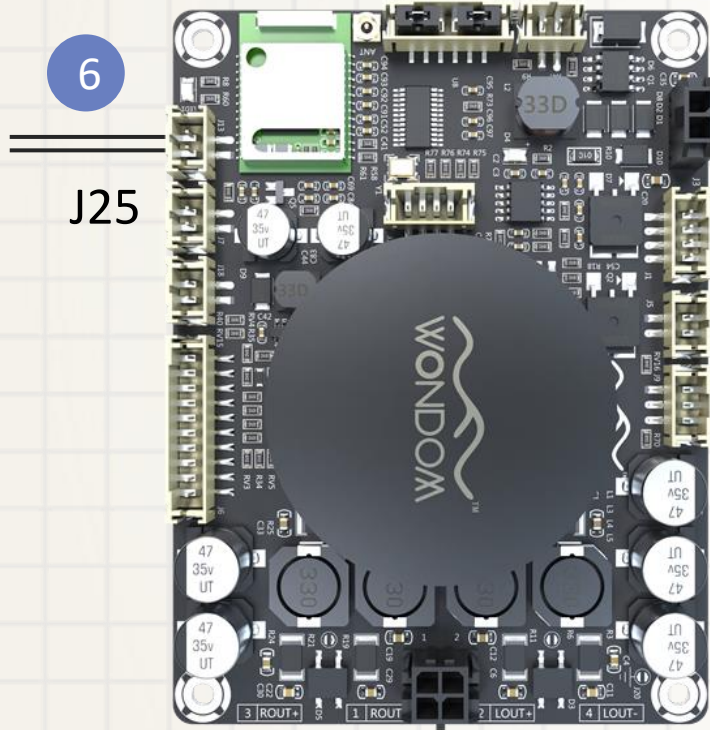

6, Mixed Line output – J25


Besides speaker output, JAB2v2 provides a mixed line output. After frequency setting in the PC UI, you can use it as subwoofer signal and build an audio 2.1 system.

Please note that it's line output signal, so an amplifier board is required for connecting with a speaker.



Control

Bluetooth control

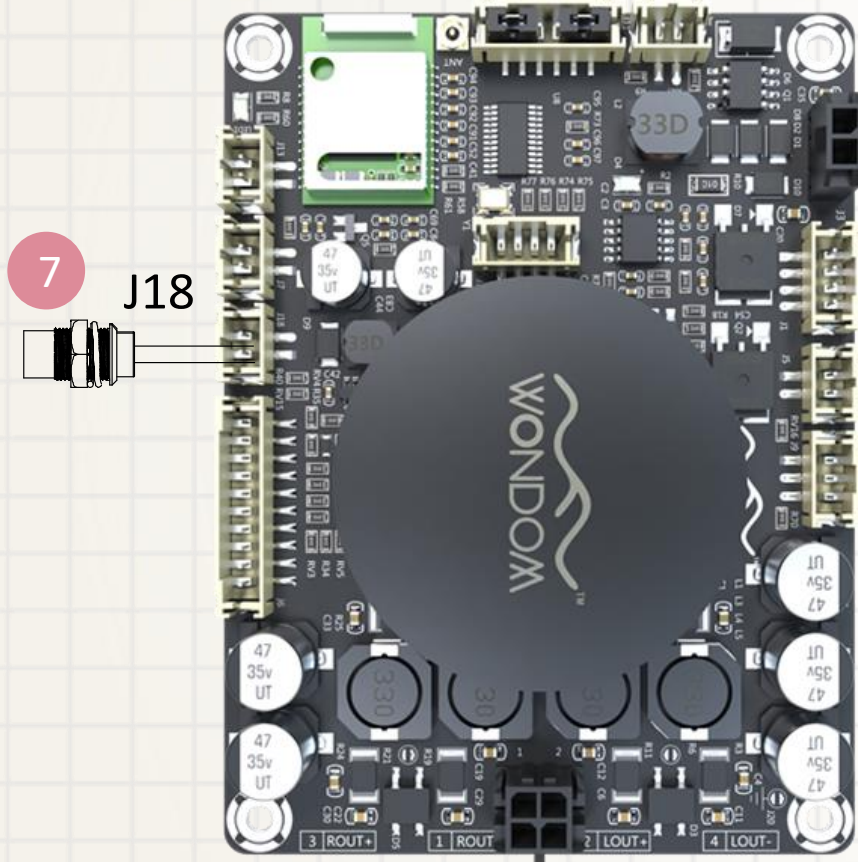


7, Bluetooth pairing cancellation – J18

When Bluetooth is paired, short circuit J18 to cancel pairing. After cancellation, please release short circuit.


You can find the Bluetooth pairing cancellation cable with a button in the Functional cables kit (AA-JA11114 / AA-JA11116).

When Bluetooth is paired, press the button for cancellation.

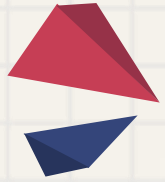

Control

Programming

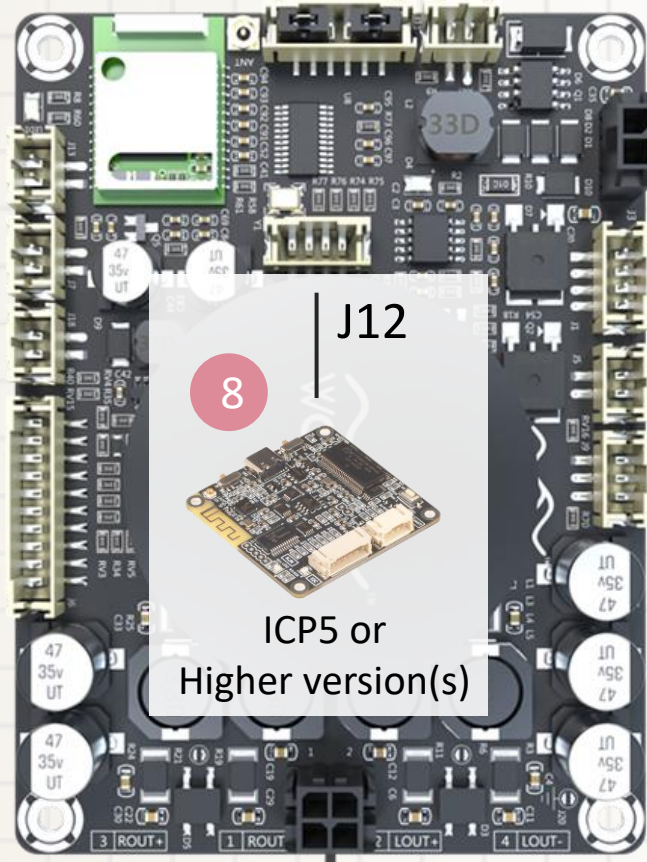


8, PC UI control – J12

Customers can connect JAB2v2 with ICP5 or higher version(s) to get PC UI control, SigmaStudio Control or Bluetooth LE control.


With PC UI, you can adjust parameters of the audio system to customize your audio.

As for details, please refer to 'PC UI control' part.

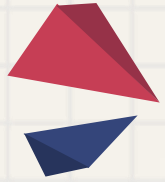


Control

PC UI Control

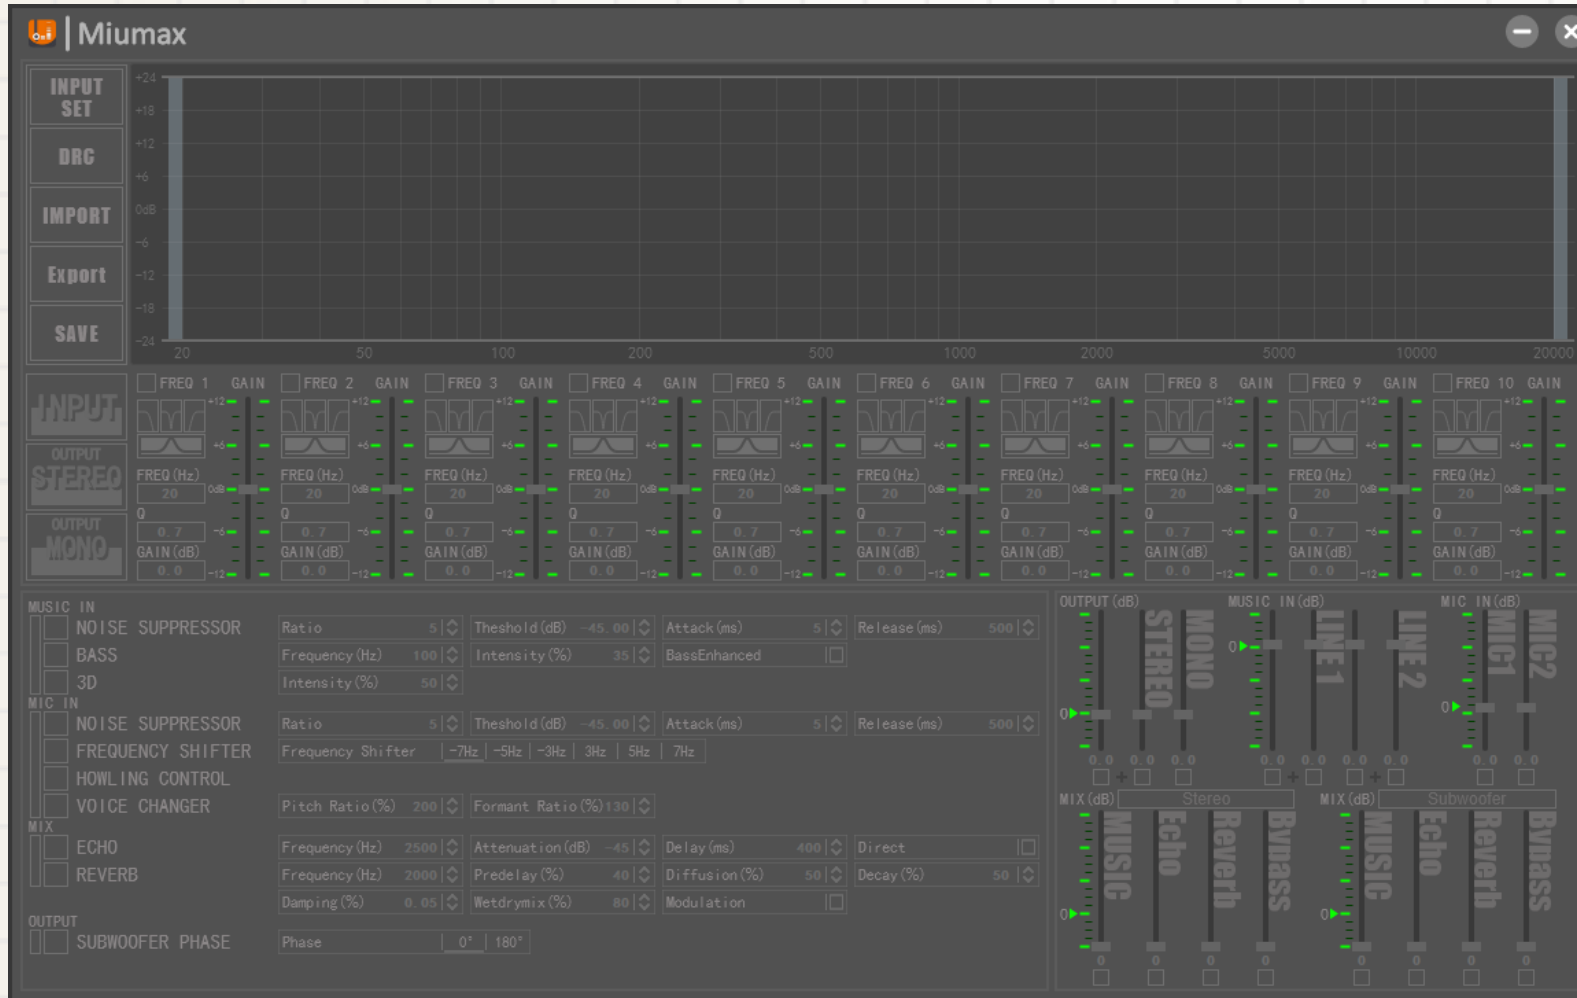


Multiple Functions:

- Gain adjustment
- Volume adjustment
- High-pass filter
- Low-pass filter
- Noise suppressor
- Bass
- 3D
- Frequency shifter
- Voice changer
- Echo
- Reverb
- EQ setting
- Graphic Interface

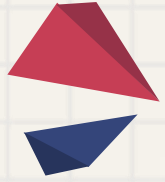

Control

Shutdown control

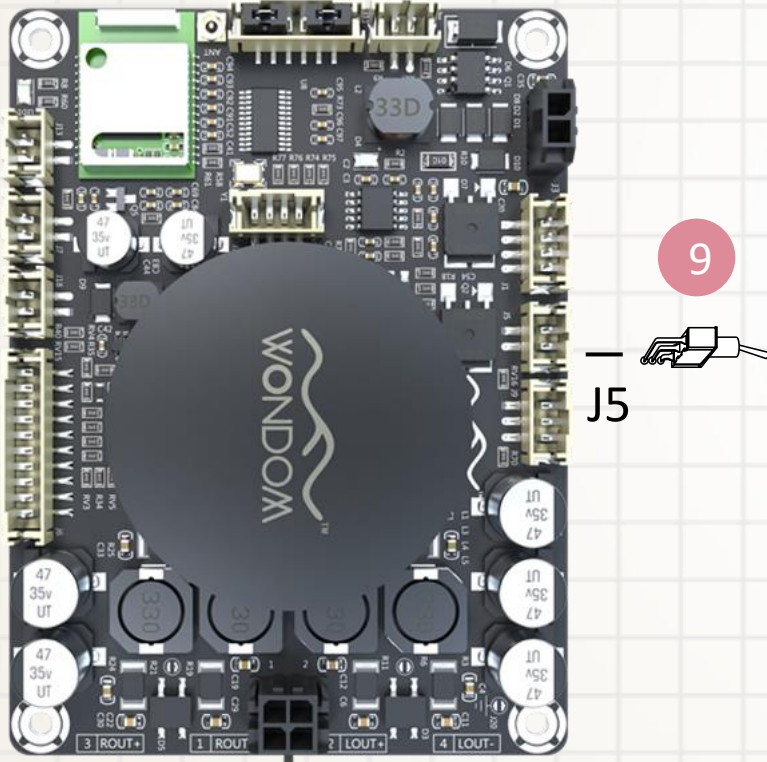

9, Shutdown Control – J5

Shutdown control function is equipped on JAB2v2.

Short circuit J5 to enter into shutdown mode, in which mode, JAB2v2 would be powered off.
Once you release the short circuit, JAB2v2 will re-run.

 
You can find the PH-2Pos shutdown control cable in the Functional cable kit (AA-JA11114 / AA-JA11116).




Control

Volume Control

11

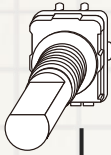


J11

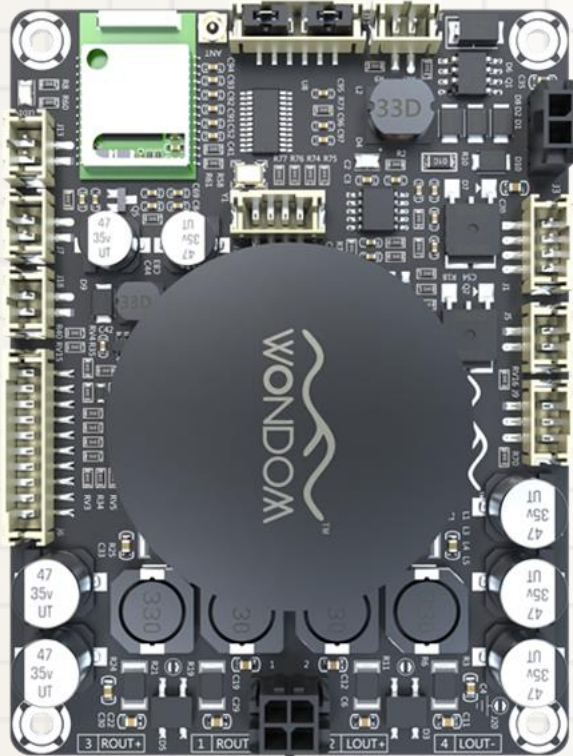

11, Volume Control – J11


Connect J11 with external potentiometer to control volume. The external volume control cable and potentiometer is in the Functional cables kit (AA-JA11114).

As shown in the picture, there are two jumpers coming with J11. Please do not remove them for normal playback unless J11 is used to connect with JAB3 or the external potentiometer.

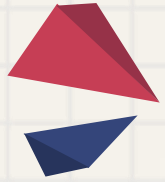

Control

Control compatible port

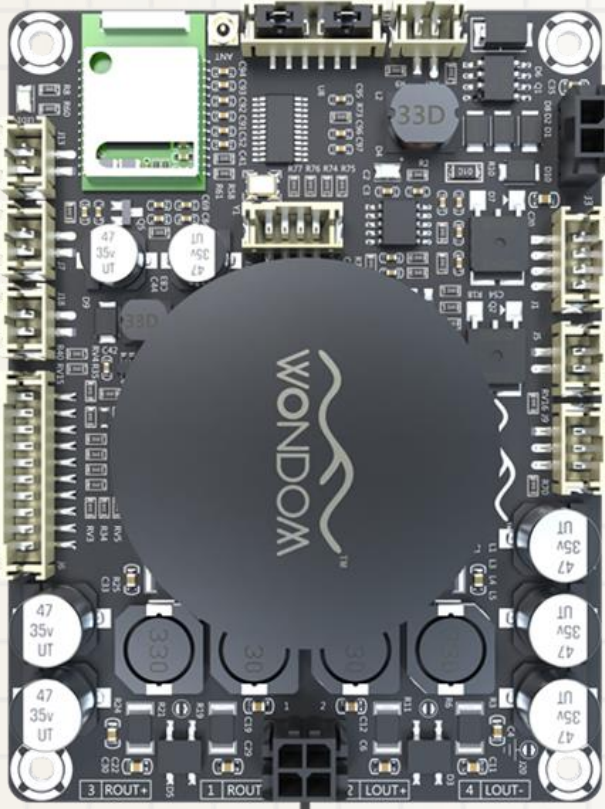


10
Synchronization
J9 Port

10, Synchronization Port– J9

JAB2v2 supports connection with JAB3 to build audio 4.0 / 2.1 system.


In order to suppress and synchronize POP noise, JAB2v2 and JAB3 need control connection to make sure the control logic of two boards are consistent. Once connected, the system built with JAB2v2 and JAB3 could be controlled and synchronized by the shutdown control port(J5) of JAB2v2.

When JAB2v2 is used separately, leave J9 open.

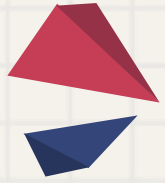

External LED Indicator

Bluetooth & Power

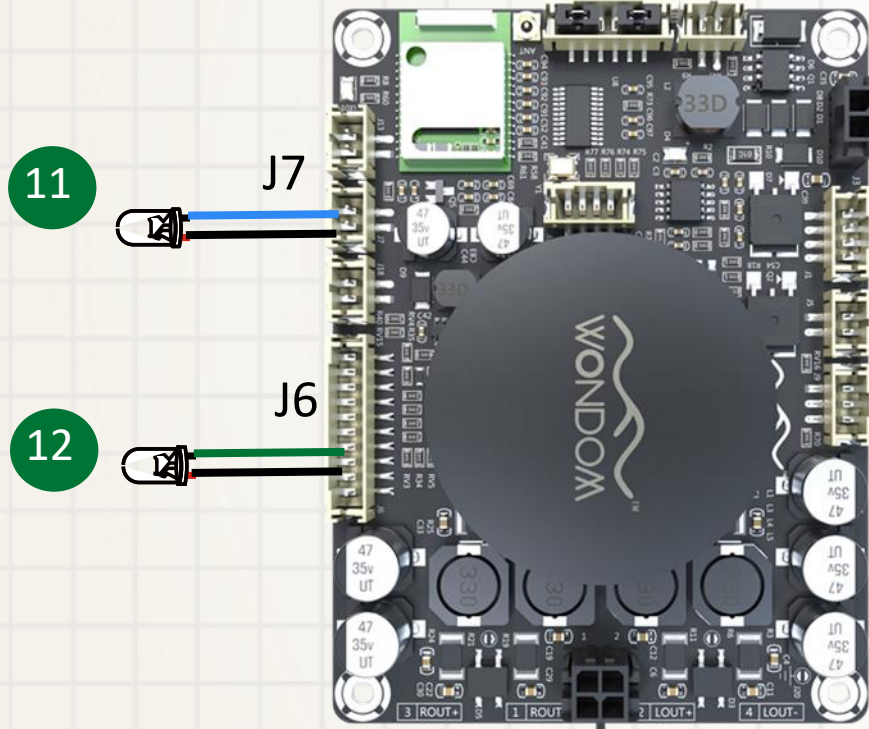


11, External Bluetooth LED indicator – J7

When Bluetooth is paired, the LED will be ON;
When Bluetooth is searching, the LED will BLINK.


12, External Power LED indicator – J6

Pin 3,4 of J6 is used as power LED indicator.
When powered on, the LED will be ON;
When powered off, the LED will be OFF.

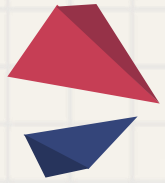

External LED Indicator


Charging

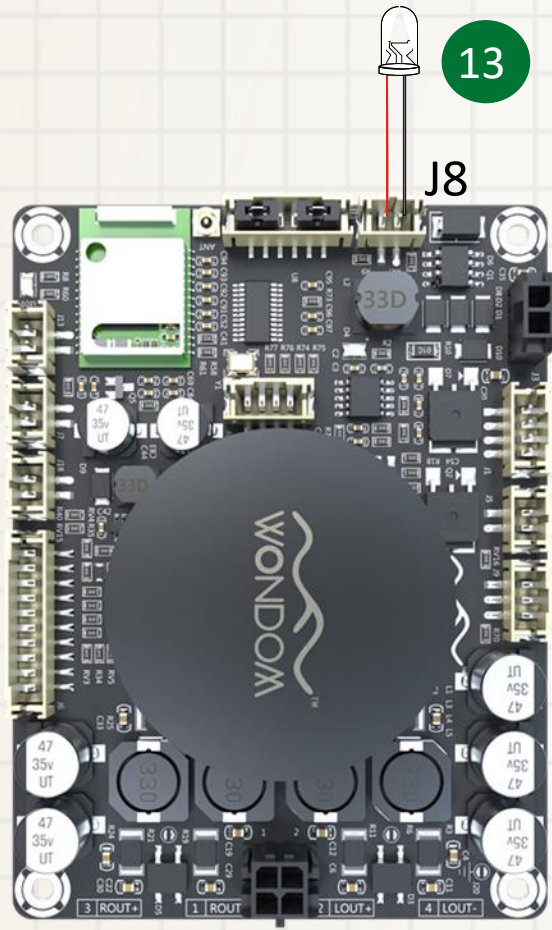

13, External MPPT Charging LED indicator – J8


When charging, the LED will be ON;
When charging is done, the LED will be OFF.

This indicator is not so accuracy when supply voltage is 12V, but from 15-24V it is indicating properly. And in the final constant voltage charging stage, this LED is not so accuracy too. If the batteries are under balancing, charge status might be incorrect. If no output detected during power up, activate the batteries with plug in a power supply unit.

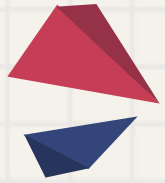

Extension Function

Extension port

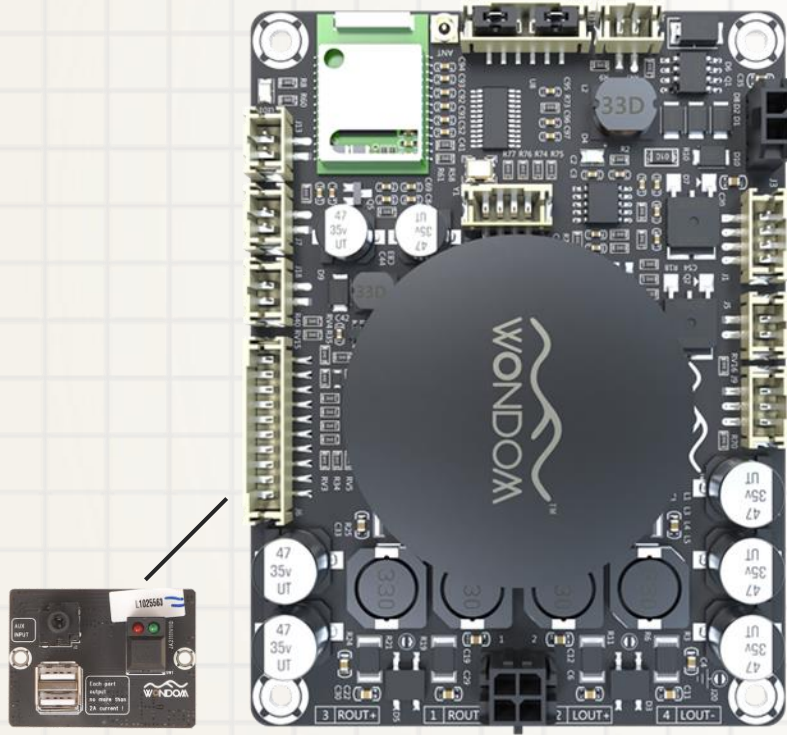

14

14, Extension port – J6

You can connect JAB2v2 with Interface extension board (AA-JA11112) through J6.

The interface extension board provides:

1. 3.5mm AUX IN port
2. Mute switch
3. USB charging port x 2. Two USB charging ports are both available for BC1.2 Protocol, which can charge all the portable devices, with 2.1A maximum per port.
4. Power indicator and mute indicator

Sure Electronics Co., Ltd.

Professional Audio Solution Provider



3F, Building F6, No. 9, Weidi Road, Xianlin, Qixia Dist., Nanjing, China

Tel: +86-025-85260046

Web: store.sure-electronics.com

Email: info@sure-electronics.com

Skype: sureelectronics



WeChat



Website



YouTube



Online Shop